FLOOR OUTLET SERIES





Flexible Combination

Various combination is possible by choosing socket outlets, data outlets, telephone modular from Panasonic wiring accessories.

Floor Box-3 Compartments for concrete floor



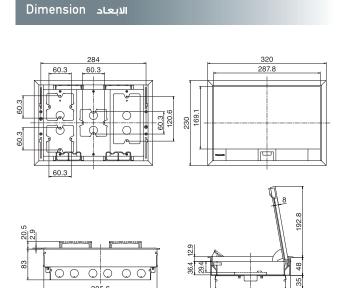

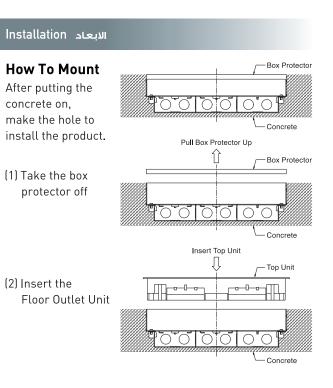

Installation Procedure

1. Embeding the Outlet Box


(1) After the completion of plumbing, install the cover unit with M4 screws. *M4 screws included.

2. Making an Inlet for Cable

- (1) Hit at the center of the box protector with hammer to make a hole.
- (2) Trim concrete along the rim of the box protector.
- (3) When install the Floor Outlet, loosen cover unit screws to remove the box protector.


3. Install the Floor Outlet to the Outlet Box

- (1) Put the Floor Outlet into the Outlet Box by sliding the lever. Fasten the setting screws after opening the cover. (Adjustable degree of product is 6 degrees)
- (2) Check direction and position of the Floor Outlet.

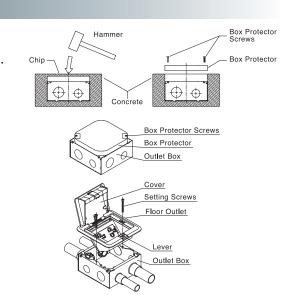

Floor Outlet Aluminium BS-TYPE








Floor Outlet Aluminium A-TYPE



الابعاد Dimension



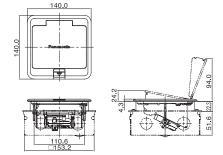

Aluminium A-TYPE

